

Peripheral Crate Rack Fiber Patch Panels

Fiber Cassette Termination Crates at Peripheral Crate Racks

Cassette Position	1	2	3	4	5	6	7	8	9	10	11	12
Peripheral Crate:	"Bottom"		"Top"			"Bottom" "Top"		"Bottom" "Top"				
YE1 only	1 Spare Spare 21 15 7	19 11 5 17 9 3	1 Spare Spare 21 15 7	19 11 5 17 9 3	Filler Panel	M1 M1 M2 M2 M3 M3 sp sp nc nc nc nc	Filler Panel	13 13 sp sp nc nc nc nc nc nc	Filler Panel	Filler Panel	Filler Panel	Filler Panel
YE2 only	1 Spare Spare 21 19 7	17 15 5 11 9 3	1 Spare Spare 21 19 7	17 15 5 11 9 3	Filler Panel	M1 M1 M2 M2 M3 M3 sp sp nc nc nc nc	Filler Panel	13 13 sp sp nc nc nc nc nc nc	Filler Panel	Filler Panel	Filler Panel	Filler Panel
YE3 only	1 Spare Spare nc nc nc nc 7	nc nc nc nc 5 nc nc nc nc 3	Filler Panel	Filler Panel	Filler Panel	M1 sp M2 sp M3 sp sp sp nc nc nc nc	Filler Panel	13 sp sp sp nc nc nc nc nc nc	Filler Panel	Filler Panel	Filler Panel	Filler Panel

Note: The numbers on the cassette ports indicate the peripheral crate slots numbers.
 Abbreviations: 'sp' indicates spare; 'nc' indicates no connection;
 M1, M2, and M3, refer to MPC connectors (slot 12) M1 = top, M2 = middle, M3 = bottom;
 DAQ path, VCC & DMB's, multi-mode, duplex, LC connectors.
 Trigger path, MPC, multi-mode, simplex, LC connectors.
 TTC, CCB, single-mode, simplex, ST connector.

